

i-Guide™: Your Interactive Programming Guide from TV Guide.

With i-Guide you'll enjoy:

- A sleek design
- A convenient, time-saving **Quick Menu**
- A friendly display with a full 90 minutes of programming listings
- A quick, responsive interface
- Enhanced searching
- And **Mini Guide**, a whole new way to watch TV and surf at the same time


Try i-Guide. In no time, you'll be able to **Set Reminders, Favorites, Parental Locks**, and use our **Mini-Guide** to find out what's next, while you continue to watch your favorite shows. Plus, you'll have access to great features like **TV On Demand*** and **Digital Video Recording†**.

With **i-Guide**, the world is at your fingertips.

*Not available in all areas. †Available with DVR receiver.

Remote Control Features

Basic Navigation

- Yellow is always the highlight color. As you navigate listings using the remote, the highlight appears on screen to indicate the current selection.
- Press the  buttons to move the highlight.
- Press **OK** to make a selection.
- Press the **EXIT** button to return to watching TV.

Remotes may vary. All functions are the same.



Using your Interactive Programming Guide

i-Guide™

A quick reference for using

- *TV Listings*
- *Digital Video Recorders*
- *TV On Demand*
- *Pay-Per-View*
- *and more!*

Quick Menu: Quick And Easy

The **Quick Menu** offers shortcuts to key **i-Guide** features. Just press the **MENU** button while watching a program, and you'll have immediate access to the **Main Menu**, as well as the more popular items available directly from the **Quick Menu**.



Action Icons – One Touch Access

While navigating the i-Guide, these icons may appear on the different screens. Move the selection over the icon and a description will appear:

- | | |
|---------------------------------|--------------------------------|
| Main Menu | Go Back to Previous Menu |
| Digital Video Recorder Menu | Set/Cancel Recording |
| On Demand Menu | Recording Options |
| Pay-Per-View Menu | Upcoming Times for Program |
| High Definition Television Menu | Watch This Program |
| Favorites Menu | Order PPV Program |
| Search Menu | View Package Information |
| Movies Menu | Play Program |
| Sports Menu | Restart Program from Beginning |
| Parental Controls Menu | Delete Program |

All Access with Main Menu

The **Main Menu** gives you easy access to all features. Simply press from the **Quick Menu**, then select from the options available, including **TV Listings, My Favorites, Digital Music, Parental Controls, Local Weather** and more.



This symbol means there are more options below. Use the arrow button on your remote to page down and view them.

Customize Your Experience with Setup Menu

You can activate and customize certain **i-Guide** features such as **Cable Box** settings, **Audio** settings and **Guide** settings, from the **Setup Menu**.



Guide Setup

Use your remote to select **Guide Setup** from the **Setup Menu** to change the way your cable box automatically tunes to a channel after a number is entered, the display of the **Flip Bar** and other settings.



Cable Box Setup.

Select **Cable Box Setup** from the **Setup Menu** to change the front display on the cable box, as well as other features.

Audio Setup.

In the **Setup Menu**, select **Audio Setup** to change features such as the stereo volume or to turn on Dolby Digital output.



Enhanced Searching

With i-Guide, you can search programs by categories such as Movies, Sports, Kids and more. Select a category from the **Search Menu** or **Quick Menu** to display listings.

Advanced Searching

Subcategories let you focus your search further. You can search for movies that fit your mood: comedies, dramas, adventure and more.



Pay-Per-View Made Easy

To order a Pay-Per-View program, select **PPV** from **Main Menu** or **Quick Menu** to go to the Pay-Per-View menu. Then select a category and press **OK** on your remote to see a listing of programs. Select a title you are interested in and press **OK** for the information screen. Highlight **BUY** and follow the on-screen prompts to order.



Program Information at Your Fingertips

i-Guide provides information while you view program listings in a grid format. Use the **▲▼** buttons on your remote to navigate program titles, and the **◀▶** buttons to see program listings for later that day. Press the **DAY+ -** buttons to advance ahead a day at a time. Press **INFO** for a detailed listing, or **OK** to tune to that program. Listings are color coded to identify different types of programs.



TV On Demand Brings the Video Store to You*

To order a TV On Demand program, select **ON** from **Quick Menu**, or **On Demand** from **Main Menu** to go to the **On Demand Menu**. Alternately, you can tune to Channel 1 on your cable box. Select a category and press **OK** on your remote to see a listing of programs. Choose any title and press **OK** for the information screen. If the program is available at no cost, the **ON** icon will appear, or if there is a cost it will be shown on the screen and the **BUY** icon will appear. Highlight **ON** or **BUY** and follow the on-screen prompts to order.



Go Ahead, Play Favorites

Select **♥** from **Quick Menu**, or **My Favorites** from **Main Menu** to set or remove channels from your **Favorites** listing. Highlight a channel and press **OK** or **FAV** on your remote and a **♥** indicator will appear next to the listing.



*TV On Demand not available in all areas.

Digital Video Recording (DVR) Puts You in Control¹

If you have a DVR, you can control live television or schedule recordings. Any time you tune to a channel, the DVR starts a temporary recording, so you can **PAUSE**, **REWIND**, or **FAST-FORWARD** to avoid missing anything. You can also press **RECORD** to save the program.



Setting a Recording


By pressing **GUIDE** on your remote or selecting **Listings** from **Main Menu**, you can browse TV listings to find a program you want to record. Press the **RECORD** button on your remote once to record the show, or press **RECORD** twice to record the entire series.



- Indicates an individual recording.
- Indicates a series recording.

Managing Series Recordings

When you set a series recording, you may wish to check **Recording Options** to specify whether you want first-run or all episodes, how many recordings to save, and other options.

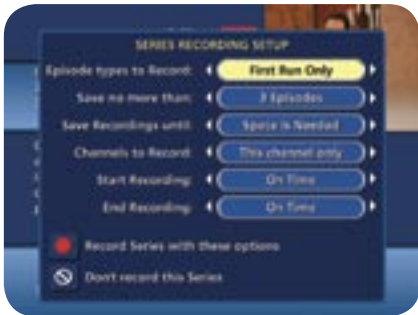

Playback Options


To see your recorded programs, press **LIST** on your remote or select **My Recordings** from **DVR Menu**. Select a program and you can watch or delete it from the DVR. Once playing, you can use either the VCR buttons or arrow buttons to control playback.



¹Available with DVR Receiver.

Parental Locks Setup

Set a parental control lock at any time while watching TV or from **i-Guide**. Press the **LOCK** button on your remote (if available), or from any program listing screen select the icon.

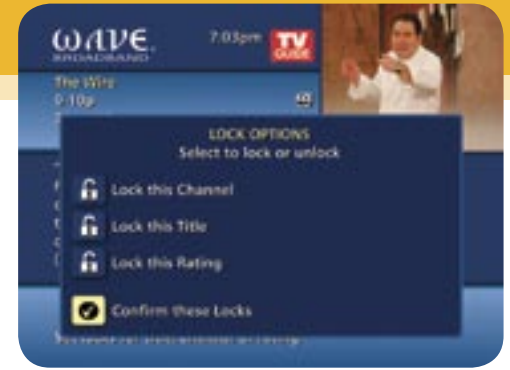

Locks Setup

You can also customize how **Parental Locks** operate and change your existing locks. Select **Locks Setup** from **Setup Menu** to remove title locks, change your ratings and channel locks, as well as set **Master Locks** and whether or not to display adult titles in **i-Guide**.



Parental and Purchase PINs

To set up and change your **Parental Locks PIN** and **Purchase PIN**, select **PINs Setup** from **Setup Menu**. Follow the on-screen prompts to create, change or clear your PINs.

Messages

Wave Broadband may occasionally send announcements of new services, special promotions and other information. If you have a message, an envelope will appear in the upper left corner of **i-Guide** and a red light will appear on the cable box. Select **Messages** from **Main Menu** to view your messages.

